

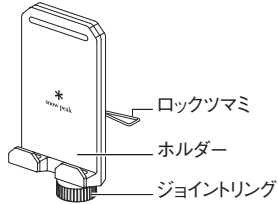


ES-190
 ギガパワーチャージャー

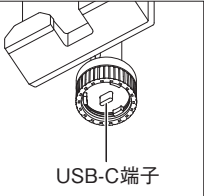

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品はギガパワーバッテリー（別売）専用のワイヤレス充電器です。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止し、ご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。



セット内容 (各部の名称)	スペック
本体  ロックツマミ ホルダー ジョイントリング  USB-C端子  収納ケース  取扱説明書（本書）	●材質:本体／ポリカーボネート樹脂、ABS樹脂、ステンレス、アルミニウム合金、真鍮、収納ケース／ポリエステル ●サイズ:108×64×183(h)mm ●収納サイズ:130×66×218(h)mm ●重量:180g ●使用電源:スノーピーク専用バッテリー ES-121、ES-122 ●使用温度条件:動作時／0℃～35℃、保管時／-10℃～35℃ ●出力:最大15W ●防水規格:IPX4 (ギガパワーバッテリー接続時)

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。	●分解や改造は絶対にしないでください。感電の原因になります。 ●本製品はES-121 ギガパワーバッテリー 15000 または、ES-122 ギガパワーバッテリー 30000（別売）のオプション製品です。それ以外の電源を使用しないでください。発熱や発火、製品の故障や転倒による思わぬ事故の原因になります。 ●本製品をご使用になる前に、必ず接続するギガパワーバッテリーの取扱説明書も併せてご確認ください。 ●ぬれた手でUSB端子に触れたり、ギガパワーバッテリーへの抜き差しを行わないでください。 ●電池の液もれや発熱、破裂、発火、感電の原因になります。 ●子供が使用する場合は保護者となる大人の監視が必要です。子供のみでの使用はケガや感電の原因になります。 ●乳幼児の手の届く場所に置かないでください。また、いたずらには十分注意してください。 ●部品の誤飲やケガの原因になります。 ●端末と本製品の間に金属製のカバーやクリップ、ステッカー、硬貨など金属製のものを挟まないでください。 ●金属片の発火や火災のほか、端末や本製品の故障の原因になります。
---	--

⚠ 警告 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。	●ご使用前に本製品を点検し、各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。 ●ご使用前にギガパワーバッテリーと本製品が確実に接続されていることをご確認ください。 ●うまく接続することができない場合はご使用を中止してください。 ●ジョイントリングは最後まで回し、本製品をギガパワーバッテリーに確実に固定してご使用ください。 ●中途半端に接続された状態でのご使用は発火や感電の原因になります。 ●USBプラグのほこりは定期的に取り除いてください。 ●発火や感電の原因になります。 ●本製品の使用温度条件は0℃～35℃です。 ●使用温度範囲を超える条件では使用しないでください。 ●発熱や発火、故障の原因になります。 ●一定以上の温度に達すると充電機能が停止したり、充電時間が長くなる場合があります。 ●火の近くや、暖房器具の近くなど高温になる所では使用しないでください。 ●発熱や発火の原因になります。 ●燃焼器具などの熱源の近く、炎天下の自動車の車内など、高温になる場所に放置しないでください。 ●ヤケドや故障の原因となります。 ●本体に大量の水がかかる所で使用したり、水につけたりしないでください。 ●感電や故障の原因になります。 ●本体を布などで覆ったまま使用しないでください。 ●感電や発火の原因となります。 ●強い衝撃を与えたり、投げつけたりしないでください。 ●火災やヤケド、ケガの原因になります。 ●本製品の動作がペースメーカーや除細動器などの医療機器の作動に影響をおよぼすおそれがあります。 ●これらの医療機器をご使用されている方はご使用前に医師や医療機器のメーカーに確認してください。
--	---

⚠ 注意 ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。	●ホルダーの上には900g以上となる重量のものを載せないでください。 ●思わぬ事故の原因になります。 ●ご使用の際は本製品を安定した水平な場所に設置し、転倒や落下にはご注意ください。 ●本体やギガパワーバッテリー、端末の破損の原因となります。 ●端末を載せた状態で本製品を持ち上げたり移動させないでください。 ●端末の落下や本製品の破損の原因となります。 ●直射日光のあたる場所に本体を設置しないでください。 ●本体表面が高温になり、ヤケドの原因になります。 ●高温多湿な場所を避け、涼しく乾燥した場所で保管してください。 ●燃焼器具などの熱源の近く、炎天下の自動車の車内など、高温になる場所に放置しないでください。 ●故障や変形の原因になります。 ●ワイヤレス充電中に本製品や端末が温かくなる場合がありますが、異常ではありません。 ●ギガパワーバッテリーと本製品を接続している状態で、持ち上げたり、移動させる際は、ギガパワーバッテリーを持ち、チャージャーは持たないでください。 ●故障や変形の原因になります。 ●落下させてしまった場合は、外観に異常がない場合でもご購入いただきました販売店様もしくは弊社ユーザーサービスまで点検を依頼してください。 ●ワイヤレス充電中に受信状態が悪くなり、着信しない、一部機能が作動しないなどの影響が発生する場合があります。 ●充電完了後に本体を長時間放置すると、電池残量が減少している場合があります。 ●ワイヤレス充電時に端末にケースや落下防止リング、カメラレンズなどのアクセサリが取り付けられていると充電ができない、または充電速度が遅くなる場合があります。 ●ワイヤレス充電を行う際は端末のアクセサリ類を取り外してください。 ●ICチップや磁気テープ付きのカード類やパスポートなどを本製品に近づけないでください。 ●ICチップや磁気テープの破損の原因となります。 ●ケーブルで充電している端末でワイヤレス充電を行わないでください。 ●端末の故障や不具合の原因になります。 ●OSやインストールされているアプリにより充電ができない、または充電速度が遅くなる場合があります。 ●本製品の動作がテレビやラジオなどの受信を妨げる場合があります。 ●テレビやラジオなどからできる限り離してご使用ください。
---	---

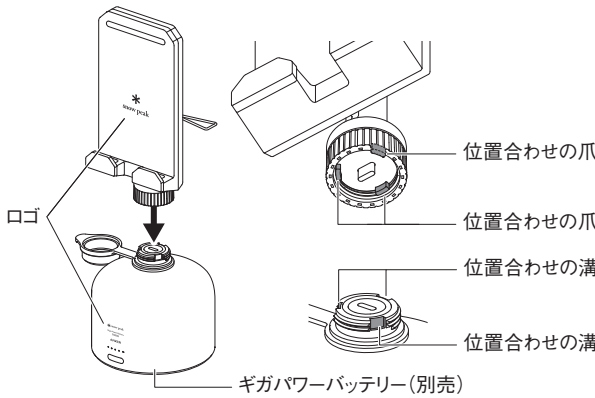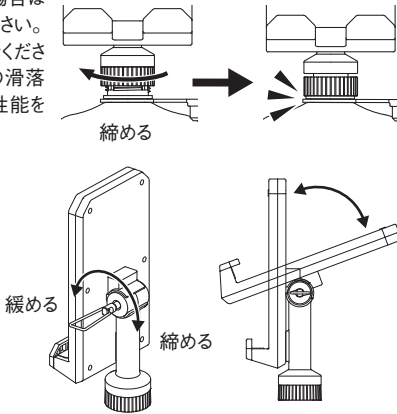使用方法
①ギガパワーバッテリー（以下、バッテリー）とチャージャーをロゴのある正面を描えて繋げてください。 ●チャージャーのUSB-C端子とバッテリーのUSB-C1ポート、チャージャーの位置合わせの爪とバッテリーの位置合わせの溝の位置が合うことを確認してください。 ※位置合わせの爪と溝の位置が合っていないと、接続することができません。
 ロゴ 位置合わせの爪 位置合わせの爪 位置合わせの溝 位置合わせの溝 ギガパワーバッテリー（別売）
②ジョイントリングをバッテリー上部のねじに合わせて締め、チャージャーを固定してください。 ※取り付ける際は必ずジョイントリングを回すようにしてください。 ●本体を回すと故障や変形の原因になります。 ※ジョイントリングが斜めにはまってしまう場合は一度ねじを緩めて再度締めなおしてください。 ※ジョイントリングはしっかりと締め込んでください。 ●締め込みがゆるいとチャージャーの滑落の原因となります。 ●また、十分な防水性能を発揮することができなくなります。
③ロックツマミを起こし、ツマミを回して緩めた後、お好みの角度に調節し、再度角度調節ツマミを反対方向に回して固定してください。 ※角度の調節を行う際は、ホルダーには端末を載せないでください。 ●ホルダーに端末が載っている状態でロックツマミを緩めると急にホルダーの角度が変わり、載せた端末が落下するおそれがあります。
 締める 緩める 締める

- ④端末をホルダーに置いて、ワイヤレス充電が開始されるか確認してください。
- △注意:2mm以上の厚みがあるケースや金属製や磁気を帯びたケースやアクセサリ類、クレジットカードは、充電前に取り外してください。
- △注意:端末を置く際に必ずホルダーが下がってこないか、落下しないかを確認してください。
- △注意:充電中は本製品と端末を動かさないでください。
- ※充電していた端末をチャージャーから離れた後、チャージャーをバッテリーに接続したまま長時間(2時間以上)経過している場合は以下の動作を行ってください。
- Ⓐバッテリーのスイッチを押す。
- Ⓑバッテリー背面のUSB-C2ポートより充電を行う。
- ◎本製品をバッテリーから抜き差しする。

- 取り外し方法**
- ①チャージャーから端末を取り外し、片手でチャージャーを支えながらジョイントリングを左に回してください。
 - ②ジョイントリングがバッテリーのねじから外れたら、チャージャーを上を持ち上げ、バッテリーから取り外してください。
- ※取り外す際は必ずジョイントリングを回すようにしてください。
- 本体を回すと故障や変形の原因になります。
- ※取り外す際は真上にまっすぐ持ち上げてください。
- ねじったり斜めに持ち上げるとUSB-C端子を破損する可能性があります。

メンテナンスについて
●長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。 ●異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。 ●本体は水または薄めた台所用洗剤(中性)を含ませた布で軽くふき取ってください。 ●定期的にUSBプラグをティッシュペーパーまたは乾いた布でふいてください。

トラブルシューティング		
トラブル	原因	対処方法
ワイヤレス充電がされない	・バッテリーの残量がない	接続しているバッテリーのスイッチを押し、インジケーターが点灯するかご確認ください。インジケーターが点灯しない場合は、バッテリーを充電してください。
	・端子が汚れている	USB-C端子が汚れている場合は、乾いた布で優しく拭いてください。
	・チャージャーとバッテリーがうまく接続されていない	ジョイントリングが締まっており、チャージャーがバッテリーにしっかりと固定されていることを確認してください。
	・充電していた端末をチャージャーから離れた後、チャージャーをバッテリーに接続したまま長時間(2時間以上)経過している。	以下のいずれかの動作を行ってください。 ④バッテリーのスイッチを押す。⑤バッテリー背面のUSB-C2ポートより充電を行う。⑥本製品をバッテリーから抜き差しする。
	・対応機種ではない	ご使用の端末が対応機種であるか、製品のウェブページにてご確認ください。 https://www.snowpeak.co.jp/products/new2024/ES-190/
	・端末がワイヤレス充電が可能な位置に置かれていない	ワイヤレス充電ができる位置は端末により異なります。端末を動かして充電できる位置を確認してください。
	・端末にケースや、落下防止リング、カメラレンズ等のアクセサリを取り付けている	端末に取り付けているケース等のアクセサリを取り外してください。
	・ケーブルで充電を行っている	ケーブルを端末から取り外してください。
充電がすぐに途切れる	・端末やバッテリーが高温になっている	端末やバッテリーを冷まし、涼しい場所で充電してください。
	・バッテリーの残量が少ない	接続しているバッテリーを充電してください。
	・端子が汚れている	USB-C端子が汚れている場合は、乾いた布で優しく拭いてください。
	・端末のバイブレーションの作動により端末の位置がずれている	端末のバイブレーション機能をOFFにしてください。
	・端末にケースや、落下防止リング、カメラレンズ等のアクセサリを取り付けている	端末に取り付けているケース等のアクセサリを取り外してください。
	・端末やバッテリーが高温になっている	端末やバッテリーを冷まし、涼しい場所で充電してください。
充電スピードが遅い	・バッテリーが充電中である	バッテリーのバススルー充電を行いながら本製品の機能を十分にご使用いただくには、30W以上出力が可能なUSB充電器（別売り）をご使用ください。
	・端末にケースや、落下防止リング、カメラレンズ等のアクセサリを取り付けている	端末に取り付けているケース等のアクセサリを取り外してください。
上記を全て試したが症状が改善しない	・故障の可能性があります	直ちに使用を中止し、弊社ユーザーサービスまでご連絡ください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。
 1.素材の経年劣化による損害など商品の寿命 /
 2.改造および粗雑な取扱いによる故障 /
 3.取扱説明書で禁止されている取扱いによる故障 /
 4.不測の事故による商品の故障 /
 5.その他製造上の欠陥以外による製品の故障 /
 6.ゴミやさびによる故障 /
 7.分解したことによる不具合の発生または破損 /
 8.落下やその他の衝撃による部品の変形や破損による不具合 /
 9.摩擦によるパーツの変化及びそれによる故障 /
 10.他社製品との組み合わせによる故障


修理について
●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。 ●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。 ●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷れを付けてください。 ●また破損時の状況をできるだけ詳しく書いたメモを添えてください。 ●修理品の運賃並びに修理費については以下のように規定させていただきます。 1.保証対象の場合:往復運賃並びに修理費は弊社に負担いたします。 / 2.保証対象以外の場合:往復運賃並びに修理費は、お客様の負担とさせていただきます。
本装置は試験されており、FCC規則のPart 15に従うクラスBのデジタルデバイスの制限に準拠していることが判明しました。 ●これらの制限は、居住用の設備または商業環境での使用時に有害な干渉から適切に保護するように設計されています。 ●本装置は、無線周波エネルギーを生成、使用、放射できる可能性があり、指示に従って設置および使用されない場合、無線通信に有害な干渉を引き起こす可能性があります。 ●ただし、特定の設置環境で干渉が発生しないという保証はありません。 ●本機器がラジオやテレビの受信に有害な干渉を引き起こした場合（機器の電源を入れ直して判断できます）、次のいずれかの方法で干渉を是正するようにしてください。 ●受信アンテナの向きや位置を変えてください。 ●装置と受信機の間隔を広げてください。 ●受信機が接続されているコンセントとは別の回路のコンセントに機器を接続してください。 ●ディーラーまたは経験豊富なラジオ・テレビの技術者に相談してください。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。	スノーピークユーザーサービス ☎0120-010-660 (9:00～17:00) Email:userservice@snowpeak.co.jp	株式会社スノーピーク 〒955-0147 新潟県三条市中野原456 Tel. 0256-46-5858 / Fax. 0256-46-5860 www.snowpeak.co.jp
MADE IN CHINA		

ES-190
 Giga Power Charger



Thank you for purchasing a Snow Peak product. This product is a wireless charger for Giga Power Battery (sold separately) for camping. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

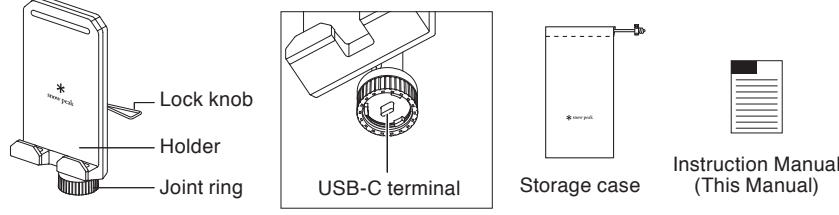Contents (Name of the Parts)	Specifications
Main unit 	●Material: Main unit: polycarbonate plastic, ABS plastic, stainless steel, aluminum alloy, brass; Storage case: polyester ●Size: 108x64x183(h)mm / 42.5"x25.1"x72"(h) ●Storage size: 130x66x218(h)mm / 51.1"x25.9"x85.8"(h) ●Weight: 180g / 6.3oz ●Power supply: Snow Peak batteries ES-121, ES-122 ●Operating temperature conditions: in use: 0°C~35°C/32°F~95°F; during storage: -10°C~35°C/14°F~95°F ●Output: max. 15 W ●Waterproof standard: IPX4 (when connected to Giga Power Battery)

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.


DANGER / Misuse could easily result in a serious accident or death.

- Do not disassemble or alter this product. It may result in electric shocks.
- This product is an optional product for the ES-121 Giga Power Battery 15000 or the ES-122 Giga Power Battery 30000 (sold separately). Do not use any other power supply with this product. It can lead to heat build-up, fire, or other unexpected accidents caused by the product malfunctioning or falling over.
- Before using this product, read the instruction manual for the Giga Power Battery that is to be connected to this product.
- Do not touch the USB terminal, or connect to or disconnect from a Giga Power Battery, with wet hands. It may result in battery leakage, heat build-up, bursting, fire, and/or electric shocks.
- Children may only use this product under adult supervision of their guardian. A child using this product unattended may result in electric shocks and/or other injuries.
- Keep out of reach of infants and children. Use due caution to prevent playing with this product. It may result in accidental swallowing of parts or other injuries.
- Do not place any metal cover, clips, stickers, coins, or other metal objects between the device and this product. It may lead to fire, including that starting from metal parts, as well as malfunction of the device and/or this product.




WARNING / Misuse could result in serious injury or death.

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- Make sure that this product is properly connected to the Giga Power Battery before use. If this product cannot be properly connected to the Giga Power Battery, stop using this product.
- Turn the joint ring completely to securely attach this product to the Giga Power Battery for use. Using this product incorrectly connected may lead to fire or electric shocks.
- Regularly remove dust from the USB plug. It may result in fire or electric shocks.
- The operating temperature range for this product is 0°C~35°C/32°F~95°F. Do not use this product under conditions that are outside of the operating temperature range. It may cause unusual heat build-up, fire, and/or malfunction. The charging function may stop or charging time may be prolonged when this product reaches a certain temperature.
- Do not place this product near fire or where it can be exposed to high temperatures such as near heating equipment. It may cause unusual heat build-up and/or fire.
- Do not place this product near a burner or any other heat source, or where it can be exposed to high temperatures such as inside a car in hot weather. Otherwise, you may sustain burns or this product may malfunction.
- Do not use this product in any place where it can be exposed to a large amount of water or be immersed in water. It may cause electric shock and/or malfunction.
- Do not use this product with the main unit covered with a cloth or other covering. It can cause electric shocks and/or fire.
- Do not throw this product or subject it to hard impacts. It may result in fire, burns, and/or injuries.
- The operation of this product may affect the functions of pacemakers, defibrillators, and other medical devices. If you are using any of such medical devices, check with your physician or the medical device manufacturer before using this product.





CAUTION / Misuse could result in injury to the user and/or damage to property.

- Do not place any heavy object weighing 900g / 31.7oz or more on top of the holder. It can lead to unexpected accidents.
- When using this product, place it on a flat, stable surface to prevent it from falling over or dropping. It may cause damage to the main unit, Giga Power Battery, and/or the device.
- Do not lift or move this product with the device loaded on it. It may cause the device to fall and/or this product to break.
- Keep this product away from direct sunlight. The surface of the main unit becomes hot and may cause burns.
- Store the product in a dry, cool place, away from heat and moisture.
- Do not place this product near a burner or any other heat source, or where it can be exposed to high temperatures such as inside a car in hot weather. It may result in malfunction and/or deformation.
- During wireless charging, this product or the device may heat up. This is not a defect.
- To lift or move this product while it is connected to a Giga Power Battery, hold the battery instead of the charger. Otherwise, malfunction and/or deformation may result.
- If you dropped this product, contact your local dealership or Snow Peak User Service for inspection even when there is no visible damage.
- Signal quality may deteriorate during wireless charging, preventing incoming calls or some functions from working.
- Leaving this product for a long period of time after full charge may reduce the battery level.
- If any case, anti-drop ring, camera lens, or other accessories are attached to the device during wireless charging, it may prevent or delay charging. Remove all accessories from the device before wireless charging.
- Do not allow cards and passports with an IC chip and/or a magnetic stripe to come close to this product. It may cause damage to the IC chip or magnetic stripe.
- Do not use wireless charging with a device that is being charged via the cable. It may result in device failure or malfunction.
- Some OS or installed apps may prevent or delay charging.
- The operation of this product may interfere with the reception of televisions and/or radios. If you hear noise or static in the television or radio, use this product away from the television or radio.

Instructions for Use

①Connect the Giga Power Battery ("battery") and the charger with the logos facing front. Make sure that the charger's USB-C terminal and the battery's USB-C1 port, and the charger's positioning tabs and the battery's positioning grooves, respectively mate.

*Proper connection is not possible without mating the positioning tabs and grooves.

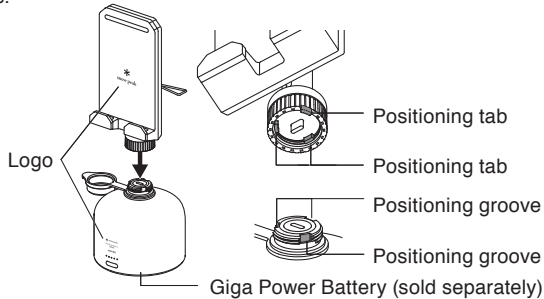

②Tighten the joint ring, placing it on the screw at the top of the battery, to fix the charger in place.


*When installing, be sure to rotate the joint ring. Rotating the main body may cause it to malfunction or become deformed.

*If the joint ring is crooked, loosen it and then re-tighten it properly.

*Make sure that the joint ring is firmly tightened. The charger can fall off if the joint ring is not tightened enough. It may also compromise sufficient waterproof performance.

③Flip up the lock knob and turn the knob to loosen it. Then adjust it to your desired angle and turn the angle adjustment knob again in the opposite direction to fix it in place.

*When adjusting the angle, do not mount the device on the holder. Loosening the lock knob while the device is still on the holder suddenly changes the holder angle, which can result in the device falling off.

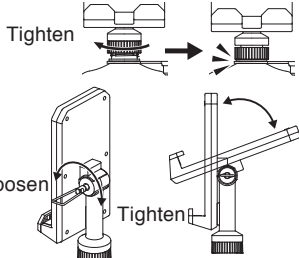

④Place the device on the holder and check whether wireless charging starts.

⚠Note: Before charging, remove any cases thicker than 2mm, metal or magnetic cases or accessories, or credit cards.

⚠Note: When placing the device on the holder, make sure that the holder does not descend or drop.


⚠Note: Do not move this product and the device while charging.

*If the charger is left connected to the battery for a long period of time (two hours or longer) after the charged device has been removed from the charger, perform the following steps:

Ⓐ Press the switch on the battery.

Ⓑ Charge the charger from the USB-C2 port on the back side of the battery.

Ⓒ Connect this product to and disconnect this product from the battery.

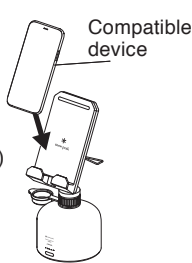

Compatible devices



Visit the following product webpage for more information on devices that are compatible with this product's wireless charging.
<https://www.snowpeak.co.jp/products/new2024/ES-190/>


Removing the product

①Remove the device from the charger and then turn the joint ring to the left while holding the charger with one hand.

②Once the joint ring comes off the battery's screw, lift up the charger to remove it from the battery.

*When removing the product, be sure to rotate the joint ring. Rotating the main body may cause it to malfunction or become deformed.


*Lift the charger straight up when removing. Twisting it or lifting it diagonally may damage the USB-C terminal.

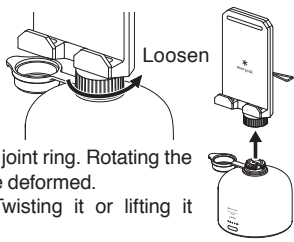

Storage

①Hold the holder vertically and turn the lock knob to flip it up.

②Place the main unit in the storage case.

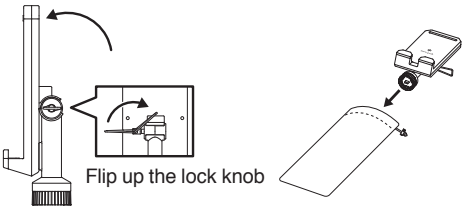

Maintenance

●Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair.

●Gently wipe the main unit using cloth dampened with water or diluted dish detergent (mild detergent).

●Periodically wipe the USB plug with tissue paper or dry cloth.

Troubleshooting

Trouble	Cause	Solution
Wireless charging does not work	• Low battery level	Press the switch on the connected battery and check whether the indicator turns on. If the indicator does not turn on, recharge the battery.
	• Terminal is dirty	If the USB-C terminal is dirty, wipe it gently with a dry cloth.
	• Charger and battery are not connected properly	Check whether the joint ring is tightened and that the charger is firmly secured onto the battery.
	• Charger is left connected to the battery for a long period of time (two hours or longer) after the charged device has been removed from the charger.	Perform one of the following operations: Ⓐ Press the switch on the battery. Ⓑ Charge the charger from the USB-C2 port on the back side of the battery. Ⓒ Connect this product to and disconnect this product from the battery.
	• Not a compatible model	Check whether your device is a compatible model on the product's webpage. https://www.snowpeak.co.jp/products/new2024/ES-190/
	• Device is not placed where the wireless charging is possible	The wireless charging position depends on the device. Move the device to find the position that it can be charged.
	• Case, anti-drop ring, camera lens, or other accessories are attached to the device	Remove such accessories from the device.
Charging stops abruptly	• Cable is being used to charge the device	Disconnect the cable from the device.
	• Device or battery is hot	Cool down the device or battery and charge the device in a cool place.
	• Low battery level	Recharge the connected battery.
	• Terminal is dirty	If the USB-C terminal is dirty, wipe it gently with a dry cloth.
	• Device moves out of place due to the vibration function of the device	Turn off the vibration function of the device.
Slow charging	• Case, anti-drop ring, camera lens, or other accessories are attached to the device	Remove such accessories from the device.
	• Device or battery is hot	Cool down the device or battery and charge the device in a cool place.
	• Battery is being recharged	Use a USB charger that can output 30 W or more (sold separately) in order to fully use this product's functions while pass-through charging the battery.
Symptom persists after trying all of the above	• Case, anti-drop ring, camera lens, or other accessories are attached to the device	Remove such accessories from the device.
	• Product may be broken.	Stop using the product immediately and contact the Snow Peak User Service.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following:1.Material deterioration caused by age. / 2.Damage caused by modifications or rough handling. / 3.Damage caused by inappropriate use not mentioned in the instruction manual. / 4.Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6.Damage caused by dust or rust. / 7.Damage and defects caused by dismantling the product. / 8.Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with another manufacturer's products.

Repair

●If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.

●When you request repairs, please make sure that the product is dry and clean.

●Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.

●Transportation and repair costs are determined as follows: 1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak. / 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

●Reorient or relocate the receiving antenna.

●Increase the separation between the equipment and receiver.

●Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

●Consult the dealer or an experienced radio/TV technician for help.

Snow Peak USA, Inc.
 404 NW 23rd Avenue, Portland, Oregon 97210, USA
 Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa
 Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.
 456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
 Tel. +81 256-46-5858 / Fax. +81 256-46-5860
 www.snowpeak.co.jp